

Tutorial for upgrading DSP FSP-8 firmware

1

Power-ON DSP (with REM signal ON to start it up)
Remote must not be plugged during the update

2

Once DSP started, wire it to your laptop (via USB cable)


3

Open FSP-8 DSP Manager Upgrade.exe




4

FSP-8 DSP Manager Upgrade will display COM port number
(if PC has all drivers for USB communication)

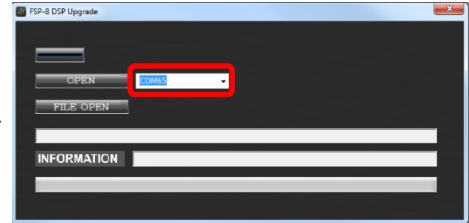

5

Click on "FILE OPEN" and load downloaded file:
"FSP-8_DSP_MAIN_V1.1.hex"

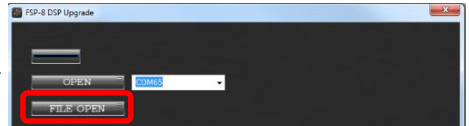

6

Click on "OPEN" until it changes to "CLOSE"



7

Switch DSP off and then power-up.
=> Update will start



8

Once "Pgm Write End!" is written, you can close the software and restart DSP => DSP is flashed

