

REFERENCE MANUAL
NAIMUNITI 2 ALL-IN-ONE AUDIO PLAYER
ENGLISH

Contents

Section	Page	5	NaimUniti 2 Integrated Amplifier	16
Contents		5.1	Selecting Inputs	16
1 NaimUniti 2 Introduction	1	5.2	Volume Control	16
1.1 The Integrated Amplifier	1	5.3	Amplifier Display	16
1.2 The CD Player	1	5.4	Signal Outputs	16
1.3 The Multi-mode Radio	1	5.5	Amplifier Fault Warnings	16
1.4 The UPnP™ Audio Interface	1			
1.5 The USB/iPod Interface	1	6 NaimUniti 2 CD Player		17
		6.1	Disc Loading	17
2 NaimUniti 2 Installation and Connection	2	6.2	CD Transport Control	17
2.1 NaimUniti 2 Rear Panel	2	6.3	CD Display and Track Selection	17
2.2 Mains Power Connection	2	6.4	CD Track Playlist Programming	17
2.3 FM/DAB Aerial Connection	2	6.5	CD Player Maintenance	18
2.4 Audio Signal Connections	2			
2.5 Speaker Outputs	3	7 NaimUniti 2 Multi-mode Radio Tuner		19
2.6 Headphone Output	3	7.1	FM Tuner – Seeking Stations	19
2.7 Signal Ground Switch	3	7.2	DAB Tuner – Seeking Stations	19
2.8 USB/iPod Interface	3	7.3	iRadio Tuner – Seeking Stations	19
2.9 Network Connections	3	7.4	Adding iRadio Stations	20
2.10 Control Sockets	4	7.5	Storing Radio Presets	20
3 NaimUniti 2 Operation	5	7.6	Using Radio Presets	20
3.1 Front Panel Features	5			
3.2 Front Panel Buttons (normal play mode)	5	8 NaimUniti 2 UPnP™ Audio Interface		21
3.3 Front Panel Buttons (list and setup modes)	5	8.1	UPnP™ Servers	21
3.4 Front Panel Display (normal play mode)	6	8.2	Audio File Compatibility	21
3.5 Front Panel Display (list mode)	6	8.3	Scanning Servers and Playing Files	21
3.6 Front Panel Display (setup mode)	6			
3.7 NaimUniti 2 Remote Handset	7	9 NaimUniti 2 USB/iPod Interface		22
3.8 NaimUniti 2 Text Entry	8	9.1	USB Media and File Compatibility	22
3.9 The n-Stream Control App	8	9.2	iPod Compatibility and Charging	22
		9.3	Browsing and Playing USB Files	22
4 NaimUniti 2 Setup	10	10 NaimUniti 2 Specifications		23
4.1 The Setup Home Menu	10			
4.2 The Language Menu	10			
4.3 The Inputs Menu	10			
4.4 The Speakers Menu	11			
4.5 The Headphones Menu	12			
4.6 The Network Settings Menu	12			
4.7 The Front Display Menu	13			
4.8 The Clock and Alarm Menu	13			
4.9 The Handset Keys Menu	14			
4.10 The Factory Settings Menu	15			

Note: This manual is issue No. 6 and describes the operation of NaimUniti 2 units running software release version 3.13.xx. NaimUniti 2 units running earlier software will not operate fully in the manner described in this manual. The software running in a NaimUniti 2 is displayed in the Factory Settings menu.

The "Made for iPod" logo indicates that this product has been designed specifically to work with iPod. The manufacturer certifies that this accessory has been made in accordance with the high standards of quality and performance that you expect from iPod and Apple.



Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

iPod, and iTunes are trademarks of Apple Inc., registered in the U.S. and other countries. Windows Media is a trademark of Microsoft Corporation.

NaimUniti 2 Introduction

1 NaimUniti 2 Introduction

NaimUniti 2 is a highly capable product that will repay time and effort spent on installation and setup. We strongly recommend that you read this manual. NaimUniti 2 effectively incorporates five separate elements. Each of these is introduced in the following paragraphs and subsequently described in full detail in Sections 5 to 9. The NaimUniti 2 elements are:

An Integrated Stereo Amplifier	Introduced below and fully described in Section 5
A CD Player	Introduced below and fully described in Section 6
A Multi-mode Radio	Introduced below and fully described in Section 7
A UPnP™ Audio Interface	Introduced below and fully described in Section 8
A USB/iPod Audio Interface	Introduced below and fully described in Section 9

Prior to the sections describing NaimUniti 2's elements, Section 2 covers its installation, Section 3 describes its operation and Section 4 describes its setup.

1.1 The Integrated Amplifier

1.1.1 Inputs

NaimUniti 2 incorporates an audio preamplifier that provides five analogue and five S/PDIF digital audio external inputs. The preamplifier also accepts internal inputs from NaimUniti 2's integrated CD player and FM/DAB tuner.

In addition to conventional analogue and digital input signals, the NaimUniti 2 preamplifier can accommodate the following external peripheral inputs:

- iPod models and USB memory via a USB interface.
- Internet radio and universal plug and play (UPnP™) servers via an Ethernet network socket or wireless network connection.

1.1.2 Signal Outputs

The NaimUniti 2 preamplifier provides the following analogue signal outputs:

- A line output (pre volume and balance controls).
- Two mono unfiltered subwoofer outputs (post volume and balance controls).
- A preamplifier output (post volume and balance controls).
- A headphone output (post volume and balance controls).

1.1.3 Controls

The NaimUniti 2 preamplifier provides volume, balance, input selection and mute control from either the front panel or the supplied remote handset.

1.1.4 Speaker Outputs

NaimUniti 2 incorporates a stereo power amplifier rated at 70 Watts per channel into 8 Ohms. The power amplifier is designed to drive one pair of speakers via the sockets on the NaimUniti 2 rear panel.

1.2 The CD Player

NaimUniti 2 incorporates a CD player based on the same swing-out CD drawer and transport used in other Naim CD players. The transport is able to play standard "Red Book" CDs and CDR discs. CD track order can be programmed or tracks can be shuffled (played randomly).

1.3 The Multi-mode Radio

The NaimUniti 2 multi-mode radio combines an FM/DAB (Digital Audio Broadcasting) tuner and an internet radio (iRadio) player. A total of 40 radio stations across all three modes can be stored as presets. In FM and DAB mode stations are tuned by NaimUniti 2 scanning the respective transmission bands. In iRadio mode NaimUniti 2 receives data streams and a list of available radio stations from a dedicated internet server. iRadio requires broadband internet access via a home network connection.

The NaimUniti 2 DAB module incorporates full broadcast and station display capabilities. The FM module is fully RDS (Radio Data System) capable.

Note: DAB and RDS broadcasts are not available in all territories.

1.4 The UPnP™ Audio Interface

NaimUniti 2 can connect to a home network and play audio files stored on UPnP™ drives.

1.5 The USB/iPod Interface

NaimUniti 2 incorporates a front panel USB interface socket that enables audio files stored on USB memory sticks and Apple iPod models to be selected and played.

Note: 5th generation and later, and all iPod touch models, are compatible with the NaimUniti 2 USB interface.

Note: Earlier iPod and other portable music players may be connected from their headphone sockets to NaimUniti 2's front panel analogue input using a 3.5mm stereo jack cable. Player control via NaimUniti 2's user interface will not however be possible.

NaimUniti 2 Installation and Connection


2 NaimUniti 2 Installation and Connection

NaimUniti 2 should be installed on an equipment stand intended for the purpose. Do not stand it directly on top of another item of equipment and ensure it is well ventilated. Care should be taken to ensure that it is level. It should be installed in its final location before connecting cables or switching on. NaimUniti 2 has no standby mode and is intended to be left switched on.

A transit screw on the underside of the NaimUniti 2 case should be removed before use and replaced if the unit is to be moved. This transit screw must not be used in any other Naim product. Handle NaimUniti 2 with extra care once the transit screw is removed.

Connecting NaimUniti 2 to mains power and to a variety of audio peripherals and sources is described in the following paragraphs. Diagram 2.1 illustrates the NaimUniti 2 rear panel connection sockets.

2.1 NaimUniti 2 Rear Panel

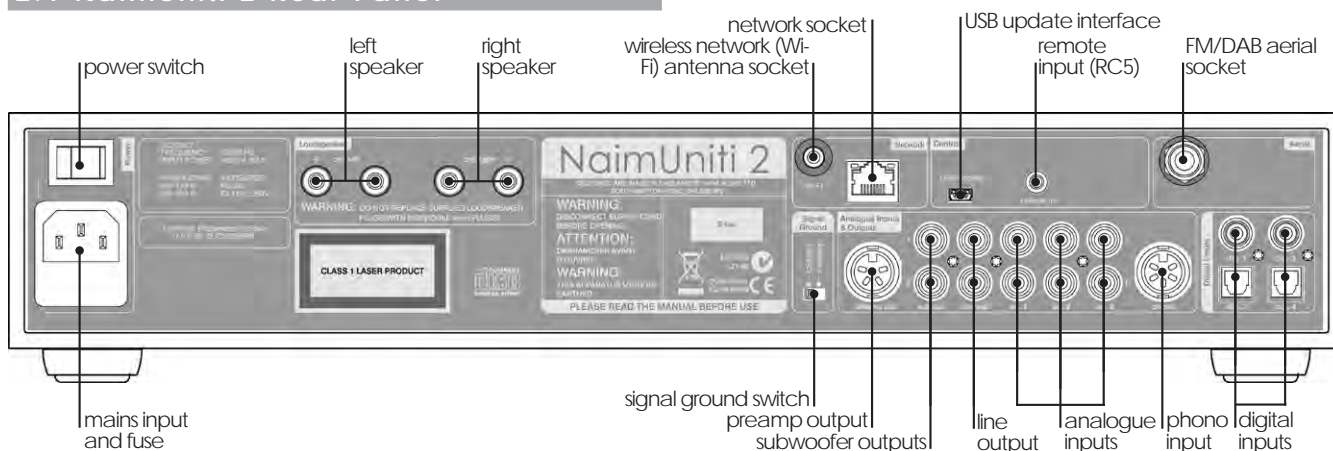

2.2 Mains Power Connection

Connect NaimUniti 2 to a mains power socket using either the mains cable supplied or a Naim Power-Line.

2.3 FM/DAB Aerial Connection

In order to enable high quality FM and DAB radio, NaimUniti 2 requires a strong, interference-free radio signal. Its rear panel FM/DAB Aerial socket must be connected, via 75 Ohm low-loss coaxial cable, to a suitable aerial. The aerial should be mounted clear of large obstructions and as high as possible; ideally on a roof.

Note: Your local retailer should be able to offer advice on a suitable aerial and aerial installer.

2.4 Audio Signal Connections

2.4.1 Audio Signal Inputs

NaimUniti 2 provides five stereo analogue inputs and five S/PDIF digital inputs including one combined analogue/digital input socket. Connection to the inputs is made via a variety of socket types. The following table lists the inputs and their socket types:

Input	Type	Socket
an. 1	Analogue	RCA phonos
an. 2	Analogue	RCA phonos
an. 3	Analogue	RCA phonos
phono	Analogue	240° 5 pin DIN
front panel	Analogue	3.5mm jack
	Digital	3.5mm mini-TosLink jack
dig. 1	Digital	Coaxial (RCA phono)
dig. 2	Digital	Optical (TosLink)
dig. 3	Digital	Coaxial (RCA phono)
dig. 4	Digital	Optical (TosLink)

Note: The Phono DIN socket carries a power supply output intended to power a Naim phono preamplifier. A turntable cannot be used with NaimUniti 2 without an external phono preamplifier.

Note: The front panel analogue/digital jack socket can accept both conventional analogue 3.5mm plugs and mini-TosLink optical digital plugs. It will automatically identify the type of plug inserted and handle the signal appropriately.

Always use high quality interconnect cables to connect sources to NaimUniti 2 inputs.

NaimUniti 2 Installation and Connection

2.4.2 Audio Signal Outputs

NaimUniti 2 provides audio signal outputs for a variety of applications. Connections to the outputs are made via the socket types listed in the following table:

Output	Type	Socket
Preamp out	Analogue stereo	4-pin DIN
Sub out 1	Analogue mono	RCA phono
Sub out 2	Analogue mono	RCA phono
Line out	Analogue stereo	RCA phonos

Note: The preamp output is intended for connection to an upgrade or second power amplifier. The output is taken after the NaimUniti 2 volume and balance controls so a power amplifier connected to it will respond to NaimUniti 2 volume and balance control changes. The output always reflects the selected input signal.

Note: The two subwoofer outputs are mono and unfiltered. They are taken after the NaimUniti 2 volume control so subwoofers connected to them will respond to NaimUniti 2 volume control changes. The outputs always reflect the selected input signal and can be switched on or off in the Speakers setup menu.

Note: The stereo line output is intended to be connected to a recording device. It is taken before the NaimUniti 2 volume and balance controls so does not reflect volume or balance control changes. The output always reflects the selected input signal.

2.5 Speaker Outputs

A set of stereo speaker connection sockets is provided on the NaimUniti 2 rear panel. Custom Naim Audio loudspeaker connectors are supplied to make the connection and in order to comply with current European safety regulations these should always be used. Naim Audio speaker cable will provide the best results, however, a range of speaker cable types may be used without risk of damage to the amplifier. Contact your local Naim retailer for further advice. Use equal lengths of speaker cable for each channel.

Ensure when connecting speakers that they are "in phase". That is, the positive and negative connection orientation at both the speaker and amplifier ends of the cable is the same for both channels.

2.6 Headphone Output

NaimUniti 2 is fitted on its front panel with a 3.5mm stereo headphone socket. Insertion of a headphone plug will mute the speaker outputs.

Note: NaimUniti 2 controls and stores volume settings separately for headphones and speakers.

2.7 Signal Ground Switch

NaimUniti 2 is fitted on its rear panel with a **Signal Ground** switch offering two positions: **Chassis** or **Floating**. Select the **Chassis** position unless NaimUniti 2 is connected in a hi-fi system incorporating another earthed source component, or mains "hum" is audible through the loudspeakers. Contact your retailer, distributor or Naim for advice if necessary.

Note: "Connected" in the context above means an analogue audio signal cable that includes an earth connection.

Note: All Naim CD players are earthed so the Signal Ground switch should be set to floating if one is connected in the system.

No damage will be done if the wrong Signal Ground position is chosen, however the system sound quality may be compromised.

2.7.1 General Audio Connection Notes

The NaimUniti 2 negative analogue input and output connections for each channel are common. The mains earth (ground) should always be connected regardless of what other equipment is used. The mains earth primarily grounds the case and the electrostatic screen within the transformer, and is only connected to the signal negative if the **Signal Ground** switch is set to **Chassis**. In order to avoid hum loops, the signal negative of the whole system should be connected to the mains earth in one place only.

2.8 USB/iPod Interface

NaimUniti 2 is fitted with a front panel USB interface intended for the connection of Apple iPod models and USB memory sticks carrying audio files. The USB interface should not be used for any other purpose.

Depending on the setup options chosen (see Section 4.3.6), iPod batteries will be charged when connected to the USB interface.

2.9 Network Connections

2.9.1 Wired Network Connection

NaimUniti 2 is fitted on its rear panel with a standard RJ45 Ethernet socket. This socket enables NaimUniti 2 to join home networks via a network router to access internet radio data streams or to play audio files stored on appropriately configured UPnP™ servers.

Ethernet-over-mains hardware may be used and provides a simple and convenient method of wired home network connection. However, depending on mains wiring factors specific to each home environment, the presence of network data on the mains supply may compromise overall system sound quality. If any sound quality compromise is found to be unacceptable, dedicated network cabling should be installed or wireless networking should be employed.

NaimUniti 2 Installation and Connection

2.9.2 Wireless Network Connection

If NaimUniti 2 is to connect wirelessly to the home network the supplied Wi-Fi antenna must be fitted to the rear panel wireless antenna socket. Wireless configuration will also be necessary before NaimUniti 2 is able to connect to the network. See Section 4.6.1 of this manual.

2.9.3 Network Settings

NaimUniti 2 is set up when originally shipped not to require any on-site network configuration but to connect to a network automatically (it uses DHCP by default). However, if your NaimUniti 2 has been previously used, its network configuration may have been altered leaving it unable to connect automatically. If this appears to be the case ensure that DHCP is selected in the Network Settings menu and re-start NaimUniti 2. If problems still persist contact your retailer, installer or Naim Audio directly. See Section 4.6.

Note: Before reporting network connection problems carry out a Factory Reset operation and try again. Select Reset All Settings from the Factory Settings setup menu. See Section 4.10.

Note: A NaimUniti 2 switched on without a working wired network connection will only be able to connect to a home network wirelessly. To use an Ethernet (wired) connection, switch NaimUniti 2 off, connect the network and switch it on again.

Note: For internet radio to operate NaimUniti 2 requires connection to a broadband internet service via a router/modem with a built-in firewall.

2.10 Control Sockets

The NaimUniti 2 is fitted on its rear panel with a 3.5mm jack **Remote In** socket and a **mini-USB** interface socket.

The Remote In socket can be used for RC5 remote control of the NaimUniti 2 via a wired connection or a remote IR repeater.

The mini-USB socket enables firmware upgrades and diagnostic tests to be carried out. Contact your Naim retailer for more information if required.


Note: The mini-USB interface is not intended for the connection of USB memory devices.

NaimUniti 2 Operation


3 NaimUniti 2 Operation

NaimUniti 2 can be operated from either its front panel controls or from the supplied remote handset. In either case, setting up and operating NaimUniti 2 requires navigation through a menu-driven user interface. The general principles of the interface are carried across each of NaimUniti 2's elements so this section of the manual describes and illustrates those general principles.

3.1 Front Panel Features

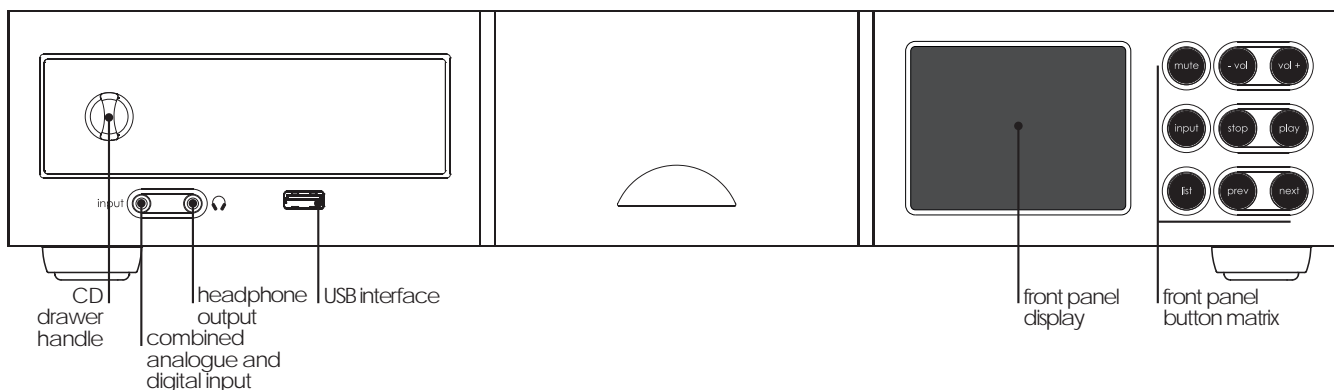

3.2 Front Panel Buttons (normal play mode)

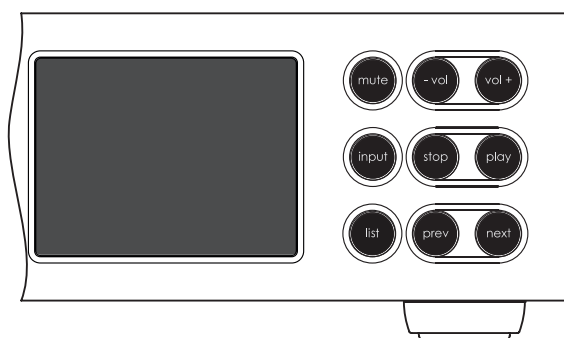


3.2.1 Normal Play Mode

In **normal play** mode the NaimUniti 2 front panel buttons perform the operations described by their legends:

mute	silences NaimUniti 2
-vol	decreases volume
vol+	increases volume
input	sequentially selects inputs
list	switches NaimUniti 2 to list mode
stop	stops play
play	starts play
prev	selects previous track or audio file
next	selects next track or audio file

3.3 Front Panel Buttons (list and setup modes)

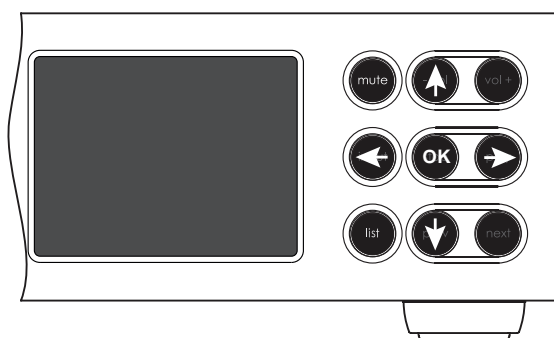


3.3.1 List and Setup Mode

In **list** and **setup** modes the NaimUniti 2 front panel buttons (except mute) reconfigure. The reconfigured buttons are illustrated in the diagram above and their operation is described below:

-vol	navigate up menu or list
input	go to previous menu or list (or previous character)
play	go to next menu or list (or next character)
prev	navigate down menu or list
stop	OK (confirm selection)
list	exit list mode
mute	silences NaimUniti 2
next	non-operational
vol+	non-operational

NaimUniti 2 Operation

3.4 Front Panel Display (normal play mode)

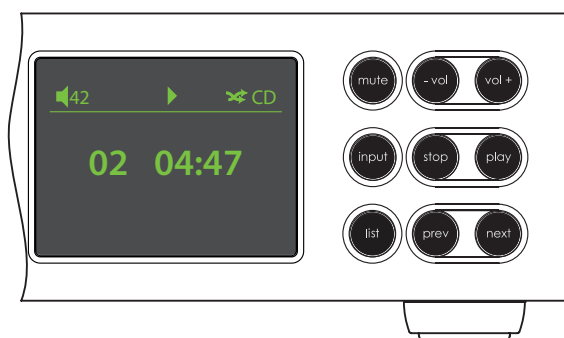


In normal play mode the NaimUniti 2 screen provides a variety of information on the current setup, the input selected and the material playing. A typical normal play mode screen is illustrated above showing track two of a CD has been playing for four minutes forty-seven seconds.

At the top left of the screen the volume level is displayed along with a "speaker" icon that shows NaimUniti 2 is not muted.

At the top of the screen the "play" icon is displayed to show that the play is underway and the "shuffle" icon is displayed to show random play has been selected. "CD" shows that the CD input is selected.

3.5 Front Panel Display (list mode)

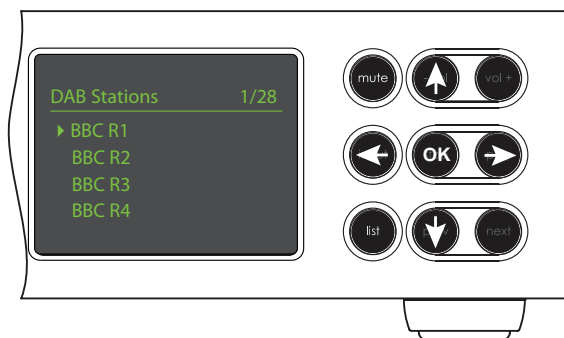

List mode is entered by pressing the front panel **list** button or handset **ok/list** key. List mode is used where sources provide data that can be browsed: a list of radio stations or tracks for example.

Lists displayed will depend on the input selected and data available. A typical list mode screen is illustrated above showing the DAB radio stations available with BBC R1 selected.


At the top right of the screen, "1/28" denotes that the selected item is number one of twenty-eight.

To scroll up and down lists and select items use the front panel or handset **up** (▲) and **down** (▼) keys and **ok/list** buttons or keys. To return to normal display press the handset **exit** key or front panel **list** button.

Note: The right (▶) key duplicates the ok/list key when navigating list mode menus.

In long item lists the handset **numeric/text** keys can be used to jump through the list alphabetically.

3.6 Front Panel Display (setup mode)

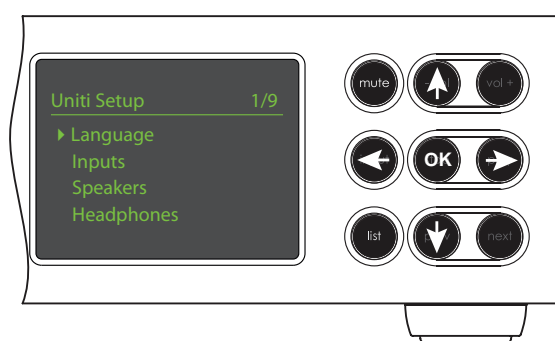

Setup mode is entered by pressing the handset **setup** (🔑) key or pressing and holding the front panel list button. It provides access to all user-configurable NaimUniti 2 parameters.

The screen illustrated above is the setup home screen that is always displayed when setup mode is entered. The "1/9" at the top right denotes that the selected item is number one of eight.

To navigate around the setup menu and make selections use the front panel or handset **up** (▲), **down** (▼) and **left** (◀) arrow keys to navigate around menus and the **ok/list** button or key to confirm a selection.

Note: The right (▶) key duplicates the ok/list key when navigating setup mode menus.

To exit setup mode press the handset **setup** (🔑) key a second time or press the **exit** key or front panel **list** button.

NaimUniti 2 setup is covered in Section 4.

Note: If programme material is playing when NaimUniti 2 enters setup mode it will continue to play. The volume, mute and transport (play, pause, stop etc.) keys on the handset will remain operational.

NaimUniti 2 Operation

3.7 NaimUniti 2 Remote Handset

The supplied remote control handset is a multifunctional device designed specifically for Naim Uniti Series products.

To fit batteries, remove the battery cover and insert the batteries into the body taking care with their orientation. Replace the battery cover.

The handset key functions are listed and described in the tables below. Some keys change function when NaimUniti 2 is in list/setup mode. Normal play mode functions are denoted by the text on each key and list/setup mode functions are denoted by the text below each key. Keys with only one function are listed in the table on the right.

3.7.1 Normal and List/Setup Mode Keys

Key	Normal Mode	List/Setup Modes
Numeric text	Enter digits 1 to 9	Enter characters in text
0 └─	Enter 0 (zero)	Enter spaces in text
preset del	Display the radio preset list	Delete last character in text
store ↑	Display the radio preset menu	Switch text case
input+ ▲	Select next input	Menu up navigation
input- ▼	Select previous input	Menu down navigation
◀	Input dependent (see note)	Previous menu or back one character in text
▶	Input dependent (see note)	Next menu or forward one character in text
exit	No function	Exits current menu without saving changes
list ok	Display input dependent list of tracks/functions	Confirm action or selection

Note: Navigation (◀ ▶ ▲ ▼) key assignments can be altered via the Handset Keys setup menu. See Section 4.9.



3.7.2 Normal Play Mode Keys

Key	Function
disp	Switches NaimUniti 2 display on or off. Toggles clock display if configured.
vol +	Increase volume
vol -	Decrease volume
mute	Silences NaimUniti 2
↻ (repeat)	Repeat selected track, programme or playlist
⚡ (shuffle)	Play tracks randomly from list
⚙ (setup)	Display the setup menu
i (info)	Cycle through secondary input information
▶▶ (play/pause)	Play or pause track
◀◀ (previous)	Go to previous track/station
▶▶ (next)	Go to next track/station
■ (stop)	Stop track
◀◀ (reverse)	Fast reverse track
▶▶ (forward)	Fast forward track
cd	Selects the cd input.
radio	Sequentially selects the FM, DAB and iRadio inputs.
pc	Sequentially selects the UPnP™ input.
iPod	Sequentially selects the USB/iPod and front panel inputs.
tv	Sequentially selects the an. 1 and dig. 1 inputs.
av	Sequentially selects the an. 2 and dig. 2 inputs.
hdd	Sequentially selects the an. 3 and dig. 3 inputs.
aux	Sequentially selects the phono and dig. 4 inputs.

Note: Input selection key assignments can be altered via the Handset Keys setup menu. See Section 4.9.

NaimUniti 2 Operation

3.8 NaimUniti 2 Text Entry

Some NaimUniti 2 menu screens require text entry - naming inputs for example. Text entry is carried out using the handset numerical buttons in a manner similar to mobile phone SMS text entry.

When text entry is required, multiple presses of a key will scroll through the characters associated with that key. In addition to characters, the **preset** key provides a **delete** function, the **zero** key provides a **space** and the **store** key provides letter **case** change. The **up** (▲) and **down** (▼) keys will also scroll through all the available letters.

The enlarged handset image illustrates the number keys and the characters associated with each.

When prompted on a NaimUniti 2 screen to enter text, select characters in turn by pressing each appropriate key the required number of times. Confirm the text entry by pressing the **ok/list** key.



3.9 The n-Stream Control App

The n-Stream control application is available from the iTunes App Store. n-Stream is compatible with iPad, iPhone and iPod touch models running iOS software Version 3.1.3 or later.



3.9.1 n-Stream Setup

To begin using n-Stream to control your NaimUniti 2 you must first install the app on your iPad, iPhone or iPod touch. With the app installed and the iPad, iPhone or iPod wirelessly connected to the same network as your NaimUniti 2, start the app by touching its screen icon.

Selecting **setup** opens a menu that enables the NaimUniti 2 to be selected for control. Touch the

appropriate NaimUniti 2 as identified by its network address or device name; Uniti-C1C3 and 192.168.001.065 respectively in the illustration above.

Note: The NaimUniti 2 network address and device name can be found in its Factory Settings setup menu.

Note: The NaimUniti 2 name can be changed from its setup menu. Doing so can enable individual units in a multiple installation to be identified more easily.

The setup menu enables the following options to be configured:

- Auto connection:** Select **ON** for automatic connection to the NaimUniti 2 whenever the n-Stream app is running.
- Stay connected:** If **OFF** is selected, the n-Stream app will "sleep" following a preset period of inactivity. Selecting **ON** will force n-Stream to remain continuously active.

Note: Continuous connection of n-Stream may result in your iPad, iPhone or iPod battery draining.

- Set Weekday Alarm:** Enables a weekday alarm to be enabled and its time set.
- Set Weekend Alarm:** Enables a weekend alarm to be enabled and its time set.
- Clear Image Cache:** Deletes album artwork images stored by the n-Stream app.
- Use Hi-Fi Language:** Select **ON** for the n-Stream app to reflect the selected NaimUniti 2 display language. If **NO** is selected the n-Stream app will display in the default iPad, iPhone or iPod language.

NaimUniti 2 Operation



3.9.2 Using n-Stream

The n-Stream app is based on three main screens. The **Inputs** screen, the **Playing** screen and the **Library** screen. These screens are selected by touching the icons at the top of the display.

The **Inputs** screen enables selection of NaimUniti 2 inputs. Input names reflect those specified in the NaimUniti 2 input setup menus (See Section 4.3).




The **Playing** screen displays the currently playing item and provides appropriate transport controls. When a Radio station is playing an icon is also provided to open a preset station menu through which presets can be either stored or recalled.



The **Library** screen displays lists of playback items available to the selected NaimUniti 2 input. The adjacent illustration shows Allegro Media Server is available to the NaimUniti 2 UPnP™ input.

Note: *Allegro Media Server is an application that makes iTunes songs and playlists available to UPnP™ players.*

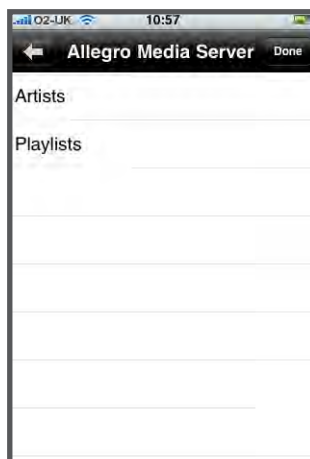

Selecting Allegro Media Server followed by items in the subsequent lists enables the selection of playlists, albums or individual tracks for playback.


The **Playing** and **Library** screens for other inputs follow the same protocol of item selection.

NaimUniti 2 Setup

4 NaimUniti 2 Setup





Once NaimUniti 2 is installed with mains power, speakers, a radio aerial and any external input connections made, it can be switched on and set up for use.



The degree to which you modify NaimUniti 2's default settings will depend upon the uses to which you put it and the extent to which you use its capabilities. It may be that you have no need to modify the default settings at all, however we would encourage you to read this section of the manual in order that you gain a full understanding of NaimUniti 2's abilities. The following paragraphs describe each NaimUniti 2 setup menu in turn starting with the setup home menu.

Enter NaimUniti 2 setup mode by pressing the handset setup () key. Navigate around the setup menus using the handset arrow keys and make selections using the ok/list key. Exit setup by pressing the exit key.

4.1 The Setup Home Menu


The NaimUniti 2 setup home menu provides access to nine setup menus. The function of each menu is as follows:



- Language:** Enables the NaimUniti 2 user interface language to be changed.
- Inputs:** Enables various parameters for each internal and external input to be configured.
- Speakers:** Configures NaimUniti 2 speaker output options.
- Headphones:** Configures NaimUniti 2 headphone output options.
- Network:** Configures NaimUniti 2 network connection settings.
- Front Display:** Configures NaimUniti 2 display features.
- Clock & Alarm:** Configures the clock and alarm.
- Handset Keys:** Enables NaimUniti 2 inputs to be assigned to specific handset keys. Also enables configuration of the handset navigation (   ) keys.
- Factory Settings:** Enables interrogation of NaimUniti 2 status, deletion of all user presets and return to factory default settings.

Each of the nine setup menus is described in detail in the following sections. Use the handset **up** () and **down** () and **ok/list** keys to select a setup menu.

4.2 The Language Menu

The Language setup menu enables the NaimUniti 2 user interface language to be changed. Enter setup mode and use the handset **ok/list** key to select **Language**. Use the

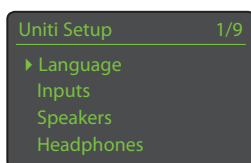



handset **up** () and **down** () and **ok/list** keys to select a language. Exit setup mode by pressing the handset **exit** key.

4.3 The Inputs Menu

The Inputs setup menu enables a variety of parameters to be specified for each NaimUniti 2 internal source and external input. These parameters define how control of NaimUniti 2 inputs behaves. The options available for each are described in the following sections. Three parameters are common to all inputs:

Enabled: Switches the input on or off and displays or hides any associated menus.

Name: Enables user specified names to be attached to inputs. Use the handset to enter text.



Input Trim: Enables the relative level of each input to be adjusted so that each is of an approximately equal volume. Adjust using using handset  or  key.

4.3.1 CD Input

Parameter	Options
Enabled:	Yes / No
Name:	User definable
Input Trim:	±10dB
Auto Select:	Yes / No. If Yes

is specified the internal CD input will be selected automatically when the drawer is closed and a disc loaded.

Auto Play: Yes / No. If **Yes** is specified play will start automatically when a disc is loaded.

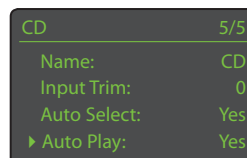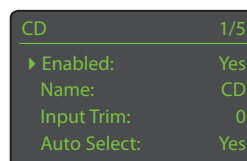

NaimUniti 2 Setup

4.3.2 FM Input

Parameter	Options
Enabled:	Yes / No
Name:	User definable
Input Trim:	±10dB
Seek Lock:	Low / Medium / High. Sets the FM signal strength required for the NaimUniti 2 tuner to identify an FM station.

FM	4/4
Enabled:	Yes
Name:	FM
Input Trim:	0
▶ Seek Lock:	Medium

4.3.3 DAB Input

Parameter	Options
Enabled:	Yes / No
Name:	User definable
Input Trim:	±10dB
Re-scan Stations:	Re-scans for DAB stations.

DAB	4/4
Enabled:	Yes
Name:	DAB
Input Trim:	0
▶ Re-Scan Stations	

Note: The NaimUniti 2 DAB input is not implemented in units distributed in territories where Digital Audio Broadcasting is unavailable.

4.3.4 iRadio Input

Parameter	Options
Enabled:	Yes / No
Name:	User definable
Input Trim:	±10dB
Auto Disconnect:	Select time. Auto-disconnect is provided so that internet data usage limits are not inadvertently exceeded by a NaimUniti 2 left connected to internet radio.
Browse History:	Yes / No. If Yes is specified NaimUniti 2 will display the last used station if it is available when list mode is selected. If No is specified NaimUniti 2 will display the top station selection menu.

iRadio	4/5
Enabled:	Yes
Name:	iRadio
Input Trim:	0
▶ Auto Disconnect:	Never

4.3.5 UPnP™ (Network) Input

Parameter	Options
Enabled:	Yes / No
Name:	User definable
Input Trim:	±10dB
Server History:	Yes / No. If Yes is specified NaimUniti 2 will remember the last used folder if the UPnP™ server is still available. If No is specified NaimUniti 2 will display the full list of available servers.

UPnP	3/4
Enabled:	Yes
Name:	UPnP
▶ Input Trim:	0
Server History	Yes

4.3.6 USB/iPod Input

Parameter	Options
Enabled:	Yes / No
Name:	User definable
Input Trim:	±10dB
Folder History:	Yes / No. If Yes is specified NaimUniti 2 will automatically display the last used folder on the USB device. If No is specified the top level folder of the device will be displayed.

USB/iPod	4/5
Enabled:	Yes
Name:	USB
Input Trim:	0
▶ Folder History:	No

iPod Charging: Always / Never. iPod battery charging takes place **always** when the iPod is connected or **never** takes place.

Note: The non-charging option is provided because there is a small reduction in iPod sound quality when simultaneously charging and playing. This means however that an iPod can potentially run out of power while playing via the NaimUniti 2.

4.3.7 Front Panel Input

Parameter	Options
Enabled:	Yes / No
Name:	User definable
Input Trim:	±10dB
Format:	Auto / Analogue / Digital. If Auto is specified the front panel input will automatically detect the audio signal format (analogue or digital) and configure the input appropriately. Specifying Analogue or Digital will fix the front panel input format.

Front	4/4
Enabled:	Yes
Name:	Front
Input Trim:	0
▶ Format:	Auto

4.3.8 Other Inputs

Parameter	Options
Enabled:	Yes / No
Name:	User definable
Input Trim:	±10dB
AV Fixed Volume:	Yes / No
	If No is selected the input will behave normally. If Yes is selected the input will operate at a fixed volume and the NaimUniti 2 volume control will be disabled. This enables NaimUniti 2 to be used in multi-channel AV systems with volume control handled by the AV processor. Take care when selecting AV Fixed Volume.

Analogue 1	1/4
▶ Enabled:	Yes
Name:	Analogue 1
Input Trim:	0
AV Fixed Volume	No

Note: AV fixed volume is only available on RCA phono analogue inputs.

4.4 The Speakers Menu

The Speakers setup menu enables a variety of speaker parameters to be adjusted. The options are tabulated and described in the following sections:

Parameter	Options
Type:	Large+Sub / Large / Small+Sub
Max. Volume:	0 to 100 (adjust using handset ▼ or ▲ keys)
Balance:	-10 to +10 (adjust using handset ▼ or ▲ keys)

The speaker **type** options specify signal routing and high-pass filtering settings.

Speakers	1/3
▶ Type:	Large+Sub
Max. Volume:	100
Balance:	0

NaimUniti 2 Setup

Select the **Large+Sub** option when a subwoofer is connected to NaimUniti 2 and used to augment the low frequency performance of large (full bandwidth) speakers.

Select **Large** when no subwoofer is used (the NaimUniti 2 subwoofer output is switched off when Large is selected).


Select **Small+Sub** when a subwoofer is used to provide the low frequency component of a speaker system incorporating small (restricted bandwidth) satellite speakers. When Small+Sub is specified, a 100Hz high-pass filter is applied to the NaimUniti 2 speaker output signal.

The speaker **Max. Volume** and **Balance** parameters specify maximum allowed volume, and the channel balance respectively.

4.5 The Headphones Menu

The Headphones setup menu enables the **Max. Volume** parameter to be specified:

Parameter	Options
Max. Volume:	0 to 100 (adjust using handset ▼ or ▲ keys)

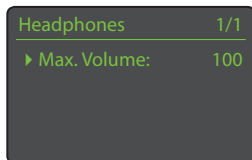

4.6 The Network Settings Menu

The Network Settings menu enables NaimUniti 2 network parameters to be customised to suit the router and network. The options are tabulated and described in the following sections:

Parameter	Options
Name:	User definable (text entry) Default: Uniti-xxxx
Wireless:	Not Used / Wireless Network Names
Status:	Connected / No Signal / Login Failure / Busy / Etc.
DHCP:	Yes / No
MAC:	Displays the NaimUniti 2 MAC address

The **Name** parameter enables the NaimUniti 2's default network name to be changed.

The **Wireless** parameter enables a wireless network to be chosen and joined. See Section 4.6.1 below for detailed wireless set up notes.

Network **Status** displays the current network connection status.

The **DHCP** parameter enables the NaimUniti 2 network settings to be modified. In most cases, specifying **Yes** and leaving NaimUniti 2 set to DHCP, will be the appropriate option. See Section 4.6.2 below for notes on non-DHCP network connection.


Note: Devices installed on a network have an IP address through which they are identified by all the other items on the network. DHCP is a set of rules that enable the

automatic allocation of addresses as items are connected (or switched on while connected) to the network. NaimUniti 2 is set up by default to use DHCP.

Note: If NaimUniti 2 is connected to the network both wirelessly and via Ethernet (wired), the Ethernet connection will take priority.

4.6.1 Wireless Network Connection Set Up

If the **Wireless** parameter is selected in the Network Settings menu the Select Network menu will display a list of the available networks. An option not to use a wireless connection is also provided. Use the handset **up** (▲) or **down** (▼) keys to scroll through the list and the **ok/list** key to select a network.

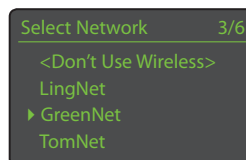


Note: NaimUniti 2 is compatible with most commonly used Wi-Fi standards. Routers that support 802.11b and 802.11g will work, however those with 802.11g compatibility are recommended for best results.

Note: As with any wireless network hardware, NaimUniti 2 connection reliability will be affected by both network router performance and Wi-Fi signal quality. To minimise the possibility of poor connection reliability, NaimUniti 2 should be connected to network audio sources by no more than one wireless "leg". Other "legs" necessary between NaimUniti 2 and the network audio sources should be wired.

Note: NaimUniti 2 cannot connect to a "hidden" wireless network.


If the selected network is secure and requires a passphrase or access key to join, NaimUniti 2 will display an alert message. Pressing the handset **ok/list** key will then open a text entry screen for entry of the passphrase or access key.

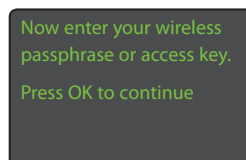

Use the handset **numeric/text** keys to enter the passphrase or access key taking care to ensure that the letter case is correct. Press the handset **ok/list** key when text entry is complete. In the illustration the passphrase is "flatfish".




If the network is successfully joined NaimUniti 2 will display a confirmation screen.

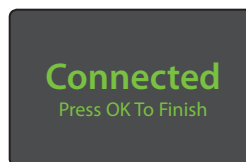

If an incorrect passphrase or access key is entered NaimUniti 2 will display an alert message.

Note: As a security measure, a router may also require the NaimUniti 2's MAC address to be entered before allowing it to join the wireless network. This

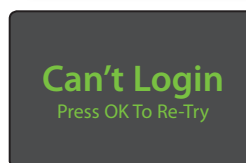

NaimUniti 2 Setup

type of security feature is known as 'MAC address filtering'. The NaimUniti 2 MAC address is shown in the 'Factory settings > System Status' page.

Note: The wireless passphrase/access key is created when the wireless router is first set up and could be a word or a series of numbers and letters. If the passphrase/access key is not known, check on the router settings page or with the person who initially set up the router.

Note: If a router offers multiple security configurations, NaimUniti 2 will automatically offer only the most secure one.

Note: If WEP security is used the router should be set to "auto" or "open" authentication.

If the selected network is insecure and requires no passphrase or access key to join, NaimUniti 2 will display an alert message. Pressing the handset **ok/list** key will immediately connect NaimUniti 2 to the network and display a confirmation screen.

This wireless network is insecure and requires no passphrase or access key. Press OK To Connect

Note: Wireless connection difficulties can sometimes be resolved by changing the wireless connection channel in the router settings.

4.6.2 Non-DHCP (Static) Network Connection

If DHCP is de-selected in the Network Settings menu, five further parameters will be displayed.

Network Settings 1/5
 ▶ IP: 192.168.0.80
 Mask: 255.255.255.0
 Gtwy: 192.168.0.1
 DNS1: 192.168.0.1

Parameter	Options
IP:	User definable (numerical entry) Default: 0.0.0.0
Mask:	User definable (numerical entry) Default: 0.0.0.0
Gateway (Gtwy):	User definable (numerical entry) Default: 0.0.0.0
DNS1:	User definable (numerical entry) Default: 0.0.0.0
DNS2:	User definable (numerical entry) Default: 0.0.0.0

These settings enable NaimUniti 2 to connect to a network using a fixed IP address. On selecting each one in turn, numerical entry screens will be displayed that require completion with the appropriate network IP address settings. Consult your network router's user documentation for help with specifying fixed IP address settings.

4.7 The Front Display Menu

The Front Display setup menu enables the behaviour of the NaimUniti 2 front panel display to be modified. The options are

Front Display 1/4
 ▶ Off During Mute: No
 Auto Off: 2 mins
 Clock When Off: Yes
 Logo Off: If Muted

tabulated and described in the following section:

Parameter	Options
Off During Mute:	Yes / No
Auto Off:	Select time from list
Clock When Off:	Yes / No
Logo Off:	If Muted / If Display Off / Always / Never

When **Off During Mute** is selected the front panel display will switch off when mute is engaged. **Auto Off** defines the length of time the display will remain switched on after the last interface operation is carried out. Time periods of between 10 seconds and 1 hour can be selected.

Note: If the display has been switched off using the handset **disp** key this setting will take priority over the **Auto Off** setting. The display will always switch on briefly when control commands are received.

The **Clock When Off** settings enables the clock to remain displayed when other display settings are switched off.

Note: If **Clock When Off** is set to "Yes" and **Logo Off** is set to "If Muted", the clock display will dim automatically 10 seconds after mute is selected.

The **Logo Off** settings select the circumstances in which the front panel logo illumination will switch off.

4.8 The Clock and Alarm Menu

The Clock & Alarm setup menu enables the NaimUniti 2 clock to be set and alarms to be configured.

Clock & Alarm 1/5
 ▶ Set Weekday Alarm
 Set Weekend Alarm
 Adjust Time Zone
 Resync Time From Net

Selecting **Set Weekday Alarm** or **Set Weekend Alarm** opens a menu that offers the following parameters and options:

Parameter	Options
Enabled:	Yes / No. Selecting Yes primes the alarm. Selecting No disables the alarm.
Alarm Time:	07:00. Selecting the time opens a screen that enables the alarm time to be set by using the remote navigation (▲ ▼ ◀ ▶) and numeric keys.
Input:	NaimUniti 2 external inputs or radio presets can be selected to become the alarm audio source.

Weekday Alarm 1/4
 ▶ Enabled: No
 Alarm Time: 07:00
 Input: Fluid Radio
 Volume: 30

Note: The NaimUniti 2 radio can only be used as an alarm signal using stored radio presets.


Volume: 30. The alarm audio volume can be set independently of the default NaimUniti 2 volume using the remote handset **up** (▲) and **down** (▼) keys.

Weekday alarms operate on Mondays to Fridays. Weekend alarms operate on Saturdays and Sundays.

NaimUniti 2 Setup

Note: The NaimUniti 2 has no default alarm tone and can only use its external inputs or radio presets as alarm signals. If the use of an alarm is critical, it is important to be certain that the alarm signal will be active when the alarm is set to sound. This is especially relevant to internet radio stations which may cease to broadcast unexpectedly.

Selecting **Adjust Time Zone** enables the time zone within which the NaimUniti 2 is located to be set. The handset **up** (▲) and **down** (▼) keys are used to select + or - with respect to GMT (Greenwich Mean Time).

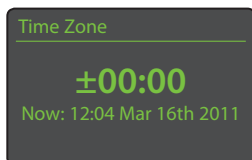

Note: The NaimUniti 2 clock does not adjust automatically to take account of localised "daylight saving" time changes. Use the Adjust Time Zone function to advance or retard the clock as appropriate.


Selecting **Resync Time From Net** enables the NaimUniti 2 clock to re-synchronise with its specified time server.

Note: The NaimUniti 2 clock re-syncs with its internet time server automatically every 24 hours. If it is unable to connect it retries every 30 minutes.

Selecting **Advanced Setup** enables an alternative internet time server to be specified. Contact your local Naim retailer for more information on selecting time servers.


4.9 The Handset Keys Menu

The Handset Keys setup menu enables the NaimUniti 2 inputs assigned to each handset input selection key (Diagram 4.9.4) to be changed, and the function of the handset navigation keys (Diagram 4.9.3) to be configured.

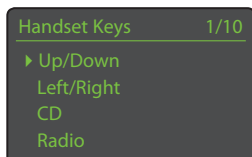


4.9.1 Navigation Key Functions

Selecting the **Up/Down Actions** parameter from the Handset Keys menu opens a further menu that enables the selection from two modes of handset **up** (▲) and **down** (▼) key function: **Input** and **Off**. If **Input** is selected the keys will select inputs and if **Off** is selected the keys will be disabled in respect of input selection.

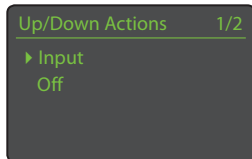

Selecting the **Left/Right Actions** parameter from the Handset Keys menu will open further menus enabling the configuration of the **left** (◀) and **right** (▶) keys independently for the CD, USB/iPod, Radios and UPnP™ inputs. The options available for the USB/iPod, UPnP™ and CD inputs are **Track**, **List** and **Off**. If **Track** is selected the **left** (◀) and **right**

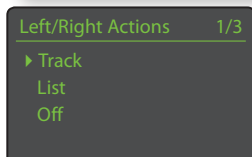

(▶) keys will select the previous or next track. If **List** is selected the keys will return NaimUniti 2 to list mode, and if **Off** is selected the keys will be disabled in respect of track or list selection.


The options available for the Radios input are **Station**, **Preset**, **List**, and **Off**. If **Station** is selected the **left** (◀) and **right** (▶) keys will select the next or previous station. If **Preset** is selected the keys will select the previous or next stored station preset. If **List** is selected the keys will return NaimUniti 2 to list mode, and if **Off** is selected the keys will be disabled in respect of station or preset selection.



4.9.2 Input Key Assignments


Each handset input selection key may have up to four inputs assigned to it.

The default assignments are shown in the following table:

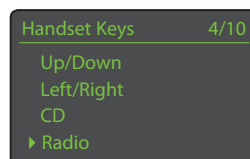

Handset Key	NaimUniti 2 Inputs Assigned
cd:	CD
radio:	FM, DAB, iRadio
pc:	UPnP™
iPod:	USB/iPod, Front
tv:	Analogue 1, Digital 1
av:	Analogue 2, Digital 2
hdd:	Analogue 3, Digital 3
aux:	Phono, Digital 4

Beneath the **Up/Down** keys and **Left/Right** keys parameters the **Handset Keys** menu displays a list of the eight handset input keys. Selecting one of the keys then displays a list of the four existing assignments to that key (including unassigned). To change an assignment, select the assignment number to be altered and, from the subsequent menu, select the desired input.

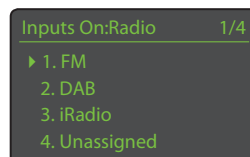

NaimUniti 2 Setup

4.9.3 Handset Navigation Keys

The navigation (◀ ▶ ▲ ▼) keys are located around the **ok/list** key.




4.9.4 Handset Input Selection Keys

The input selection keys (**cd**, **radio**, **pc**, **iPod**, **tv**, **av**, **hdd**, **aux**) are located beneath the transport keys (▶▶ ◀◀ ■ ◀◀ ▶▶).



4.10 The Factory Settings Menu

The Factory Settings setup menu enables NaimUniti 2's system status information to be displayed, handset commands to be analysed, its radio presets to be deleted and its default settings to be restored. The options are tabulated and described below:

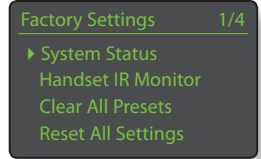

Parameter	Options
System Status:	Select to display
Handset IR Mon.:	Select to display
Clear All Presets:	Yes / No
Reset All Settings:	Warning displayed: Resetting to factory defaults. You will lose ALL user settings. Press front panel mute to continue.

NaimUniti 2 Integrated Amplifier

5 NaimUniti 2 Integrated Amplifier

NaimUniti 2 incorporates a high performance integrated preamplifier and power amplifier based on established Naim design principles. The preamplifier is able to handle both analogue and digital audio signals and, in addition to NaimUniti 2's internal CD player, multi-format radio and network interface it has inputs for five external analogue and five external digital signals.

Using the NaimUniti 2 amplifier is simply a matter of selecting the desired input and setting the listening volume level.

5.1 Selecting Inputs

Inputs can be selected by pressing the front panel **input** button, the handset **up** (▲) and **down** (▼) keys or one of the handset **input selection** keys.

Note: *The front panel input is automatically selected as soon as a plug is inserted.*

Pressing the front panel **input** button or handset **up** (▲) and **down** (▼) keys scrolls through and selects the inputs in the following order:

CD, FM (radio), **DAB** (radio), **iRadio**, **UPnP™** (Network UPnP™), **USB/iPod**, **Front** (front panel analogue/digital), **Analogue 1**, **Analogue 2**, **Analogue 3**, **Phono**, **Digital 1**, **Digital 2**, **Digital 3**, **Digital 4**.

Note: *These are the default input names. They may be altered within the NaimUniti 2 set up menus. See Section 4.3. Inputs can also be disabled so that they are hidden from selection.*

Pressing one of the handset **input selection** keys either directly selects a single input or scrolls through a group of inputs. For example, by default, pressing the **CD** input selection key selects the **CD** input, while pressing the **radio** input selection key scrolls through a group comprising the **FM**, **DAB** and **iRadio** inputs.

Note: *The default input selection key assignments may be altered within the NaimUniti 2 set up menus. See Section 4.9.2.*

Selecting an input will route that input's audio signal to the NaimUniti 2 outputs.

NaimUniti 2 will momentarily display input names as they are selected before displaying input specific information; CD track or radio preset for example.

If an input is not operational (for example, no USB memory stick is attached) when selected, NaimUniti 2 will display a descriptive alert message.

5.2 Volume Control

NaimUniti 2 volume control is achieved by using either the front panel **-vol** and **vol+** buttons or the handset **vol-** and **vol+** keys. The volume control affects the speaker, headphone, subwoofer and preamplifier outputs.

Note: *In list or setup modes front panel volume control is disabled. Volume can still be controlled using the handset volume keys.*

The mute function silences the NaimUniti 2 speaker, headphone, preamplifier and subwoofer outputs and is engaged or disengaged by pressing the front panel **mute** button or handset **mute** key. Mute is indicated by the display volume icon flashing.

5.3 Amplifier Display

In normal operation the NaimUniti 2 front panel display primarily shows information relating to the selected input. It will change temporarily to show amplifier adjustments such as volume level and signal mute state as these are made.

5.4 Signal Outputs

In addition to its speaker outputs the NaimUniti 2 integrated amplifier provides a stereo line output, two mono unfiltered subwoofer outputs, a stereo preamplifier output, and a headphone output.

The line output can be used to connect NaimUniti 2 to an analogue recording device. The NaimUniti 2 volume control has no effect on the line output level.

The subwoofer outputs are specifically intended to provide signals appropriate to drive active subwoofers. The two subwoofer outputs are identical mono signals. The appropriate subwoofer/speaker configuration can be set up through the Speakers setup menu. See Section 4.4.

The preamplifier output is designed to enable an upgrade or additional Naim Audio power amplifier to be connected to the NaimUniti 2 preamplifier.

The NaimUniti 2 headphone amplifier is able to drive most commonly available headphones. Insertion of a headphone plug will mute the NaimUniti 2 speaker, preamplifier and subwoofer outputs.

5.5 Amplifier Fault Warnings

In the unlikely event that the NaimUniti 2 power amplifier is overloaded, exceeds its normal operating temperature or malfunctions, its output will mute and the display will show a warning message.

NaimUniti 2 CD Player


Once a playlist has been created, the **Edit** and **Clear** options become available in the **Modify Program** menu. **Change** and **Insert** options also become available in the **Edit Program** menu:

Delete Track X: Select and press **ok/list** to delete the selected track from the playlist.

Change Track X: Select and press **ok/list** to change a track.

Insert New Track: Select and press **ok/list** to insert a track.

Selecting either **Change Track** or **Insert New Track** opens a window displaying the selected track number. Use the handset **numeric/text** keys or **up** (▲) and **down** (▼) keys followed by the **ok/list** key to change the track number and confirm the change or insertion.

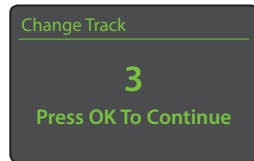

Note: *CD playlists cannot contain duplicate tracks.*

6.5 CD Player Maintenance

It is important for reliable operation of the NaimUniti 2 CD player to ensure that the surfaces of the transport platter and the underside of the puck are free of dust or debris which can prevent the disc from sitting properly and cause it to slip.

To clean the transport platter, take a piece of Blu-Tack and lightly apply it to the top surface of the magnetic metal hub, picking up any material attached to it. Brush the plastic outer edge lightly with your finger or a soft brush to ensure that it is dust and particle free. Similarly, clean the puck with Blu-Tack, to remove debris from its underside.

Do not, under any circumstances, use any solvents or fluids for the cleaning process.


NaimUniti 2 Multi-mode Radio Tuner

7 NaimUniti 2 Multi-mode Radio Tuner

NaimUniti 2 incorporates a multi-mode radio tuner able to receive FM and DAB transmissions and internet radio streams. FM and DAB operation requires an appropriate aerial to be connected to the rear panel aerial input. Internet radio requires NaimUniti 2 to be connected to a broadband internet service via a network router that incorporates an appropriate firewall. NaimUniti 2 is able to store a total of forty station presets (favourites) across all three tuner modes. Select the FM, DAB or iRadio input to begin.

7.1 FM Tuner – Seeking Stations

To find FM stations press the handset **prev** (◀) or **next** (▶) keys and the tuner will scan the FM band locking on to and stopping at stations that exceed a specific signal strength.

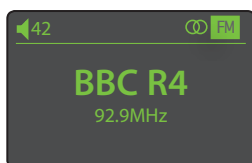

Note: The interlocked circle icon at the top right of the display indicates a stereo signal.

Note: The signal strength lock threshold may be altered within the NaimUniti 2 set up menus. See Section 4.3.2.


If stations are RDS enabled their names, rather than just their frequencies, will be displayed. Pressing the handset **info** (i) key will sequentially display any station info broadcast, station genres if defined and station frequency. If stations are not RDS enabled, the info key will display only the station frequency.

When the scan stops at a station either press the **prev** (◀) or **next** (▶) key again to ignore the station and continue the scan or store the station as a preset favourite by pressing the handset **store** key.

Pressing the handset **ok/list** key displays an FM options menu that enables mono mode to be selected. Mono operation can sometimes be useful to reduce noise and interference.

7.2 DAB Tuner – Seeking Stations

When the NaimUniti 2 DAB Radio input is first selected it must scan for stations. Select the DAB input and press the handset **ok/list** key to begin the search. Scan progress and the number of stations found will be displayed. When the scan is complete NaimUniti 2 will order the stations alphabetically and select the first station in the list.

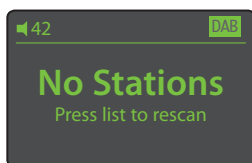


DAB stations can be selected either alphabetically in turn by pressing the handset **prev** (◀) or **next** (▶) keys, or selected in **list** mode by pressing the **ok/list** key and browsing the station list. Use the handset **up** (▲) or **down** (▼) keys to scroll through the list and the **ok/list** key to select a station. In long lists the

handset **numeric/text** keys can be used to jump through the list alphabetically.

Once a station is selected, pressing the handset **info** (i) key will sequentially display the station genre, signal strength, bit rate and any station info broadcast.

7.3 iRadio Tuner – Seeking Stations

When NaimUniti 2 is connected to a network with high speed internet access it will automatically download a list of available internet radio stations. When the iRadio input is subsequently selected, a **list mode** menu will be displayed that shows all the available stations sorted by location, genre, podcast location, podcast genre, new station and most popular stations. The display will automatically enter **list mode** so the handset **up** (▲), **down** (▼), **left** (◀) and **ok/list** keys can be used to browse the menus and select stations. In long lists the handset **numeric/text** keys can be used to jump through the list alphabetically.

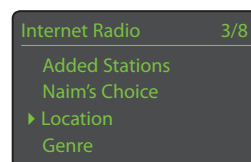


Once a station is selected the NaimUniti 2 display will exit from **list mode** and revert to normal mode. To re-enter list mode for further list browsing and selecting press the handset **ok/list** key.

Pressing the handset **info** (i) key while a station is playing will sequentially display the station (stream) name, elapsed time, stream info, buffer level and any station info broadcast.

Note: Buffer level indicates the quantity of stored data within NaimUniti 2 and reflects the ability of the network to provide data at the necessary rate.

It is possible for an internet radio station listed to be "off-line" and be unavailable when selected. If this occurs an alert message will be displayed.

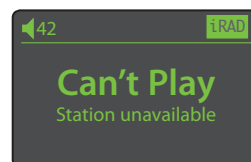

Note: If NaimUniti 2 is left muted for more than five minutes while an internet radio station is selected the data stream will be stopped in order to save network bandwidth. The stream will re-start as soon as mute is disengaged.

NaimUniti 2 Multi-mode Radio Tuner

7.4 Adding iRadio Stations

The Naim Radio Guide web site enables iRadio stations not included in the standard NaimUniti 2 list to be added for download to your NaimUniti 2. To access the web site and add stations follow the steps below.


- With a computer connected to the same network as the NaimUniti 2, browse to **http://naim.vtuner.com**
- Enter the identification (ID) of your NaimUniti 2 where requested on the web page. The ID is the unit's MAC address. This can be found via the following NaimUniti 2 menus: **Setup > Factory Settings > System Status > MAC**.

Note: You can register a username and password so that the MAC address is not required on any subsequent visit.


- To add stations follow the **My Added Stations** link and provide the information required. Click on the **arrow** to complete the procedure.
- The added station will then be visible on the Naim Radio Guide home page.
- To access the stations from the NaimUniti 2, select the iRadio input then select **Added Stations**.

7.5 Storing Radio Presets

When the handset **store** key is pressed the display will show a menu that enables confirmation of the preset store and options to rename or delete a stored preset.

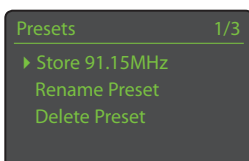


Selecting the **store** option opens a menu that enables the preset to be stored in one of the forty locations. Scroll to the desired location and press the **ok/list** key.

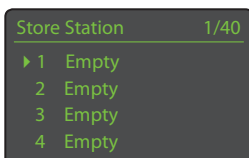

Selecting **Rename Preset**

opens a menu that provides the opportunity to rename a previously stored station. Scroll to the preset to be renamed and press the **ok/list** key to open a text entry screen. Use the handset **numeric/text** keys in text entry mode to select characters. Press the **ok/list** key to save the new preset name. See Section 3.8 for a full description of text entry.

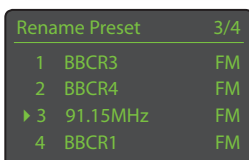

Selecting **Delete Preset** opens a preset list menu. Scroll to the desired preset and press the **ok/list** key.

Note: *Preset operations (store, rename or delete) are not possible directly from list mode. The store key must be pressed when in normal play mode to access these options.*

7.6 Using Radio Presets

To select a preset press the handset **preset** key to open the **Browse Presets** menu. Scroll to the desired preset and press the **ok/list** key.



Note: *The Browse Presets menu displays presets stored across all three NaimUniti 2 radio modes (FM, DAB, iRadio). Selecting a preset from a radio mode other than the one currently selected will automatically switch NaimUniti 2 to that mode.*

Note: *It is possible for an internet radio station stored as a preset to be "off-line" and be unavailable when subsequently selected. If this occurs an alert message will be displayed.*

Note: *Pressing the preset key will display the preset list regardless of the currently selected input.*

NaimUniti 2 UPnP™ Audio Interface

8 NaimUniti 2 UPnP™ Audio Interface

In addition to providing the network connection required for internet radio playback, the NaimUniti 2 network interface enables audio files stored on UPnP™ servers to be streamed and played. NaimUniti 2 must be connected, either wirelessly or via Ethernet cabling, to a network router. If the router provides an internet connection it should incorporate a firewall. If NaimUniti 2 is already connected to a network, begin by selecting the UPnP™ input.

8.1 UPnP™ Servers

UPnP™ servers incorporate a software application that allows NaimUniti 2, or any other UPnP™ compatible player, to play audio stored and streamed by another device on the network. The UPnP™ server is usually a PC or Mac home computer, although some Network Attached Storage (NAS) drives incorporate a UPnP™ application.

Windows Media™ Player version 11 or above incorporates built in UPnP™ support and a variety of third party UPnP™ applications are also available that are compatible with both Windows and Macintosh operating systems.

In the case of the Windows UPnP™ server the following steps must be taken before music can be streamed to NaimUniti 2:

- Ensure Windows Media™ Player version 11 or above is installed.
- Enable Windows Media™ Player file sharing. From the Media Player Options dialogue select **Library > Configure Sharing...** then select **Share my media**.
- Ensure the firewall is configured to allow file sharing.



8.2 Audio File Compatibility

The audio files stored on the UPnP™ servers attached to the network may be in MP3, M4A, ALAC, AAC, LPCM16/24, FLAC, WMA, WAV, AIFF or Ogg Vorbis formats. Files must be free of any digital rights management playback restrictions such as the Apple iTunes FairPlay system.


8.3 Scanning Servers and Playing Files

When the NaimUniti 2 UPnP™ input is selected a list of available UPnP™ servers on the network will be displayed. The display will automatically enter **list mode** so the handset **up** (▲), **down** (▼) and **ok/list** keys can be used to browse and select the desired server.

Note: *Allegro Media Server (shown in the illustrations) is a UPnP™ Media Server application that runs on Apple or Windows PCs and provides access to media files and iTunes library contents from UPnP™ media players such as NaimUniti 2.*

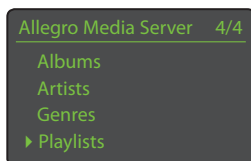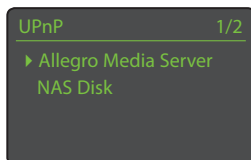

The manner in which the UPnP™ server is set up will define how the audio files and playlists it holds are listed and displayed. In most cases the default setup will list and display files by artist and album, but list by genre and predefined playlists may also be available.

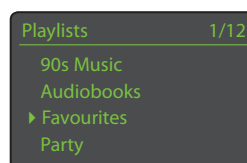

Note: *Playlists cannot be generated or stored locally by NaimUniti 2. To play a playlist it must reside on the UPnP™ server.*

Selecting one of the playlist categories using the **up** (▲), **down** (▼) and **ok/list** keys will display a menu showing items that fall into the selected category. An entire category can be selected for playback by using the **up** (▲), **down** (▼) keys followed by the **play/pause** (▶||) key.



Alternatively, selecting a category using the **up** (▲), **down** (▼) keys followed by the **ok/list** key will display the full list of tracks contained within the category. Tracks can then be selected for playback by using the **up** (▲), **down** (▼) and **ok/list** keys.

In long lists the handset **numeric/text** keys can be used to jump through the list alphabetically.

Once playback is underway the NaimUniti 2 display will exit from **list mode** and revert to normal mode where the handset transport keys (▶|| ◀◀ ▶▶ ■) can be used to control playback. To re-enter list mode for further list browsing and selecting press the handset **ok/list** key.

During playback, pressing the handset **info** (i) key will sequentially display the server name, buffer level, track elapsed time and stream (audio file) information.

Note: *Buffer level indicates the quantity of stored data within NaimUniti 2 and reflects the ability of the network to provide data at the necessary rate.*

NaimUniti 2 USB/iPod Interface

9 NaimUniti 2 USB/iPod Interface

NaimUniti 2 can play audio files stored on USB memory sticks and Apple iPod and iPod touch models connected to the front panel USB socket. Begin by inserting a memory stick or connecting an iPod to the USB socket and selecting USB/iPod input.

9.1 USB Media and File Compatibility

USB memory sticks must be in Windows/DOS format (FAT/FAT32) to be used with NaimUniti 2. Macintosh formats are not compatible.

NaimUniti 2 can play audio files stored on USB Sticks in the following formats: MP3, M4A, ALAC, AAC, LPCM16/24, FLAC, WMA, WAV, AIFF or Ogg Vorbis. Files must be free of digital rights management playback restrictions such as the Apple iTunes FairPlay system.

9.2 iPod Compatibility and Charging

The NaimUniti 2 USB audio interface is compatible with 5th generation iPod models and all iPod touch models.

NaimUniti 2 can play iPod audio files in the following formats: MP3, M4A, ALAV, AAC, WAV and AIFF.

The iPod battery will be charged by default while the iPod is connected and an alternative NaimUniti 2 input is selected. iPod charging options can be changed in the USB/iPod input setup menu. See Section 4.3.6.

9.3 Browsing and Playing USB Files

With a USB memory stick inserted or an iPod connected and the NaimUniti 2 USB/iPod input selected, the display will enter **list mode** and show the structure of stored audio files. Use the handset **up** (▲), **down** (▼), **left** (◀) and **ok/list** key to browse and select items.



Note: The memory stick or iPod can be safely connected or disconnected at any time.

Selecting a folder will display the list of files contained within and selecting a single file will begin playback. Playback will continue through any list of files contained within a folder. The order of play can be shuffled (randomised) by pressing the handset **shuffle** (⌘) key.

In long lists of items the handset **numeric/text** keys can be used to jump through the list alphabetically.

Once playback is underway the NaimUniti 2 display will exit from **list mode** and revert to normal mode where the handset transport keys (▶◀▶▶■) can be used to control playback. To re-enter list mode for further list browsing and selection, press the handset **ok/list** key.

During playback, pressing the handset **info** (i) key will alternately display data stream info and track elapsed time.

NaimUniti 2 Specifications

10 NaimUniti 2 Specifications

Audio Outputs:	Speaker output Line output (L+R RCA) Sub output (2 Mono outputs via RCA) Preamp output (4-pin DIN)
Line Output:	275mV, 600Ω
Preamp Output Load:	10kΩ minimum
Frequency Response:	20Hz - 50 kHz
Signal to Noise Ratio:	80dB
CD Phase Response:	Linear phase, absolute phase correct
Power Output:	70WPC into 8Ω 110WPC into 4Ω
Other Outputs:	Headphone, 3.5mm jack
Antenna Input:	F type
Analogue Inputs:	3.5mm front panel jack 3 x RCA pairs 1 x DIN with power to support a Naim phono preamplifier
Digital Inputs:	5 x S/PDIF (2 x optical TosLink, 2 x coaxial, 1 x 3.5mm mini-TosLink)
Analogue Input Overload:	27 dB (RCA connections) (Phono and Front panel: 33.8 dB)
USB:	Front panel socket. Power output: 1A maximum at 5V DC
Other Inputs:	Ethernet
Remote Input:	Rear panel, RC5
Upgrade Interface:	Rear panel mini-USB
Audio Formats Supported:	Internet radio (Windows Media-formatted content, MP3 streams, MMS) Playlists (M3U, PLS) MP3, AAC (up to 320kbit/s, CBR/VBR), ALAC Windows Media-formatted content-9 (up to 320kbit/s) WAV and FLAC (up to 24bit/192kHz via UPnP or USB only) AIFF, LPCM 16/24, Ogg Vorbis
CD Compatibility:	Red Book and CD-R
Supply Voltage:	100V, 115V or 230V, 50/60Hz
Quiescent Consumption:	35 Watts
Dimensions (H x W x D):	87 x 432 x 314mm
Weight:	11.7kg
Shipping Weight:	14.4kg
Shipping Dimensions: (H x W x D)	240 x 590 x 500mm
Finish:	Black